

iBOOTH + STACKR CARE GUIDE



SOLID SURFACES + FRAME

- Clean with a damp cloth using a mild non-ammoniated cleanser. Rinse the cloth thoroughly and dry.
DO NOT USE AN ABRASIVE CLEANSER AS IT WILL SCRATCH THE FINISH.

FABRIC SURFACES

- Gently vacuum to remove dust.

Spot Removal

- Always remove the spot as quickly as possible. Most types of spot can be removed with lukewarm water, possibly with an added neutral detergent.
- Do not soak the entire piece of furniture.
- Always use a clean white cotton cloth and use only small quantities of a neutral cleaning agent at a time.

Warning!

Benzene, acetone and similar products may dissolve the underlying padding if used excessively.