


# iBooth-F Installation Guide

3. Place the work surface on the top frame and slide it forward until it's tight against the fabric screen. Install using the (4) screws through the under side of the frame. Install the hook as desired.

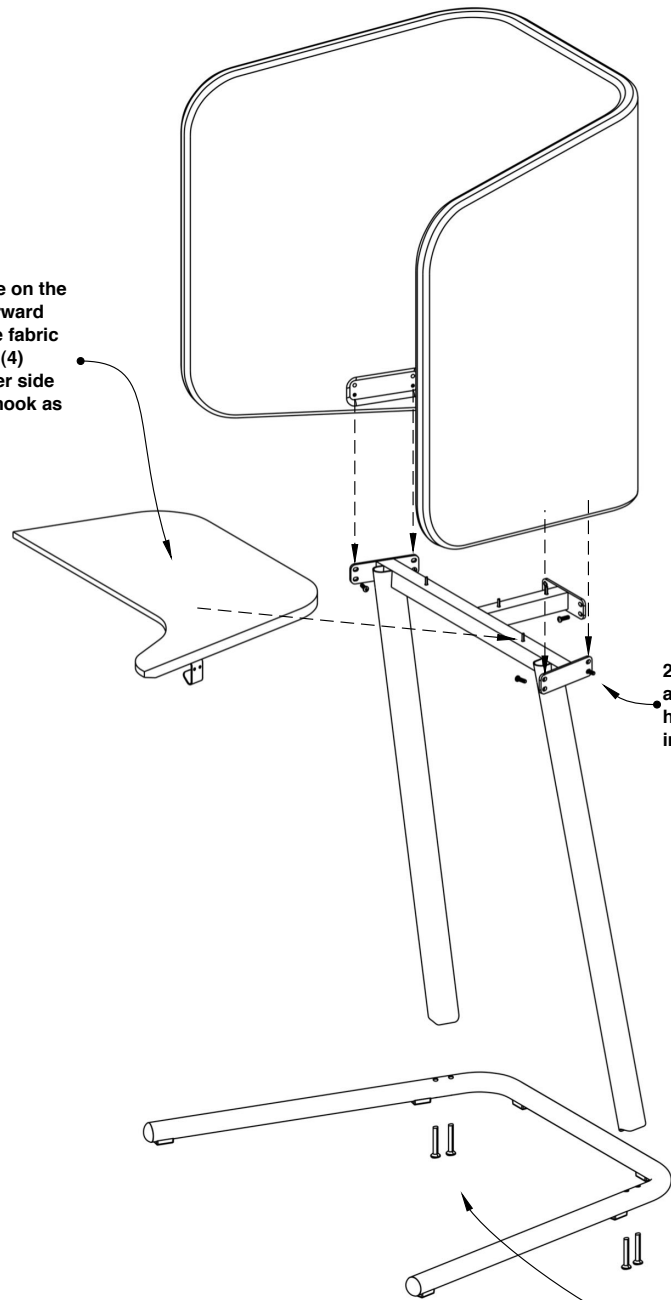

2. Place the iBooth screen in position and fasten to the base through the lower holes in the 3 brackets, using the (4) bolts included. Tighten securely.

1. Attach the floor rail to the legs with the (4) bolts included. Tighten securely.

PLEASE NOTE: THESE INSTRUCTIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.