


PRE-MOUNTED TAPE & SILICONE INSTALLATION

Step 1: Corridor Placement

Install sign a minimum of 4" away from the strike side of the door.

All braille and tactile must be with the 48"-60" height on the wall to be ADA compliant. Ensure sign is level.

Mark wall for correct placement.

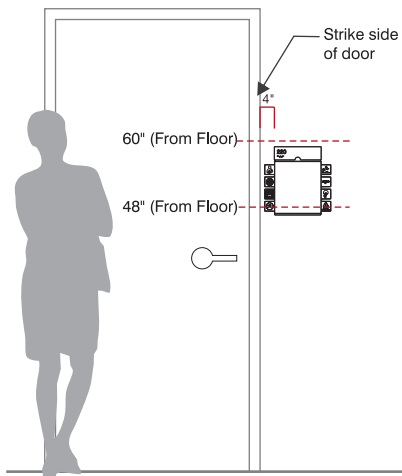


OR

Step 1: Bedside Placement


Install with proper clearance area under sign to open door and side to side to open and change out icons.

Mark wall for correct placement.

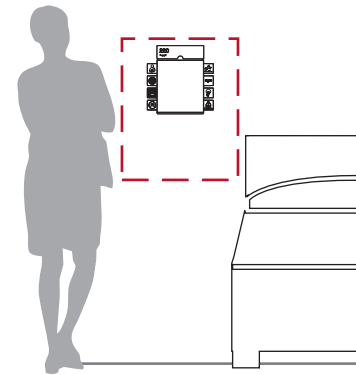

Step 2: Check Proper Clearance

If door hinge is at bottom, make sure area is free and clear of obstacles.

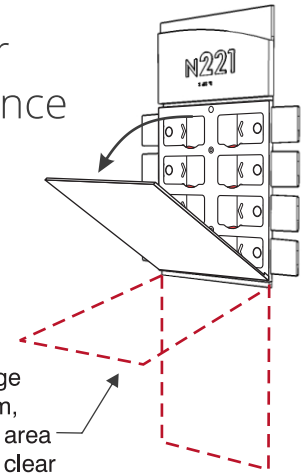


Step 3:

Apply silicone to back of sign. Silicone should be thicker than the tape trips.

Do not apply silicone too close to edges to eliminate any from being visible once sign is mounted and pressed against wall surface.


Peel backer from tape strips.

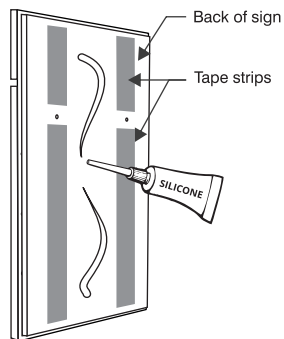

Step 4:

Put sign in place on wall according to measurement you have previously marked out.

Ensure the sign is level and press firmly against wall.

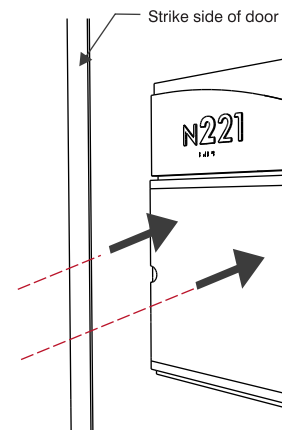

Step 5:

Clean sign face and edges of sign with mild detergent to remove all fingerprints.




MECHANICAL HARDWARE INSTALLATION

Step 1: Corridor Placement

Install sign a minimum of 4" away from the strike side of the door.

All braille and tactile must be with the 48"-60" height on the wall to be ADA compliant. Ensure sign is level.

Mark wall for correct placement.

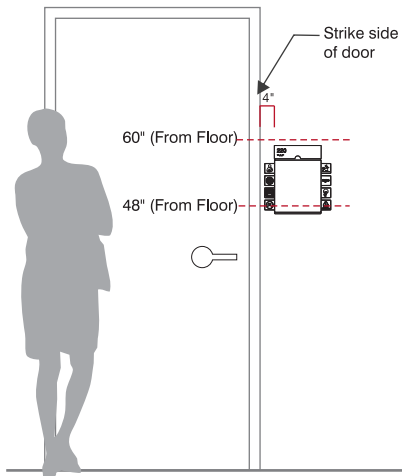


OR


Step 1: Bedside Placement

Install with proper clearance area under sign to open door and side to side to open and change out icons.


Mark wall for correct placement.

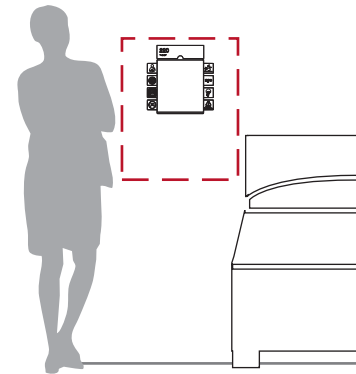

Step 2: Check Proper Clearance

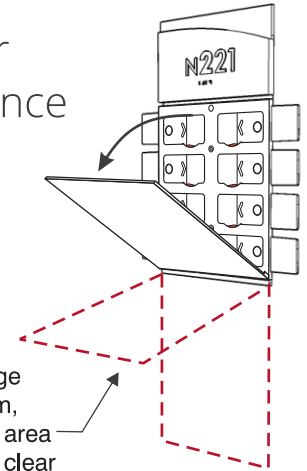

Step 3:

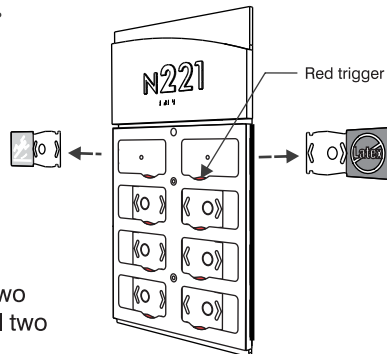


Open door and depress red triggers. Pull out top two tabs to reveal two countersunk mounting holes. Use sign as template.

Check for level and mark holes onto wall.


Step 4:

Use 1/4" drill bit and drill holes into wall where you have previously marked out.

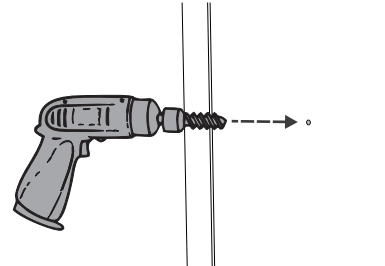


Step 5:

Hammer wall anchors into holes.

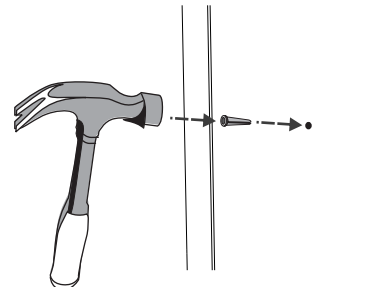

Step 6:

Use screwdriver or screwdriver bit, and fasten sign to wall with Flat head drywall screws. Replace top two tabs that you removed in Step 3.

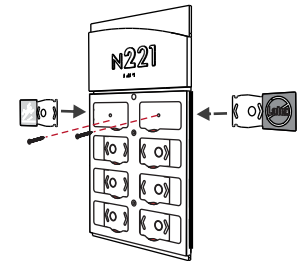

Step 7:

Clean sign face and edges of sign with mild detergent to remove all fingerprints.

