



NIK Desk / Magic Drawer Installation Guide

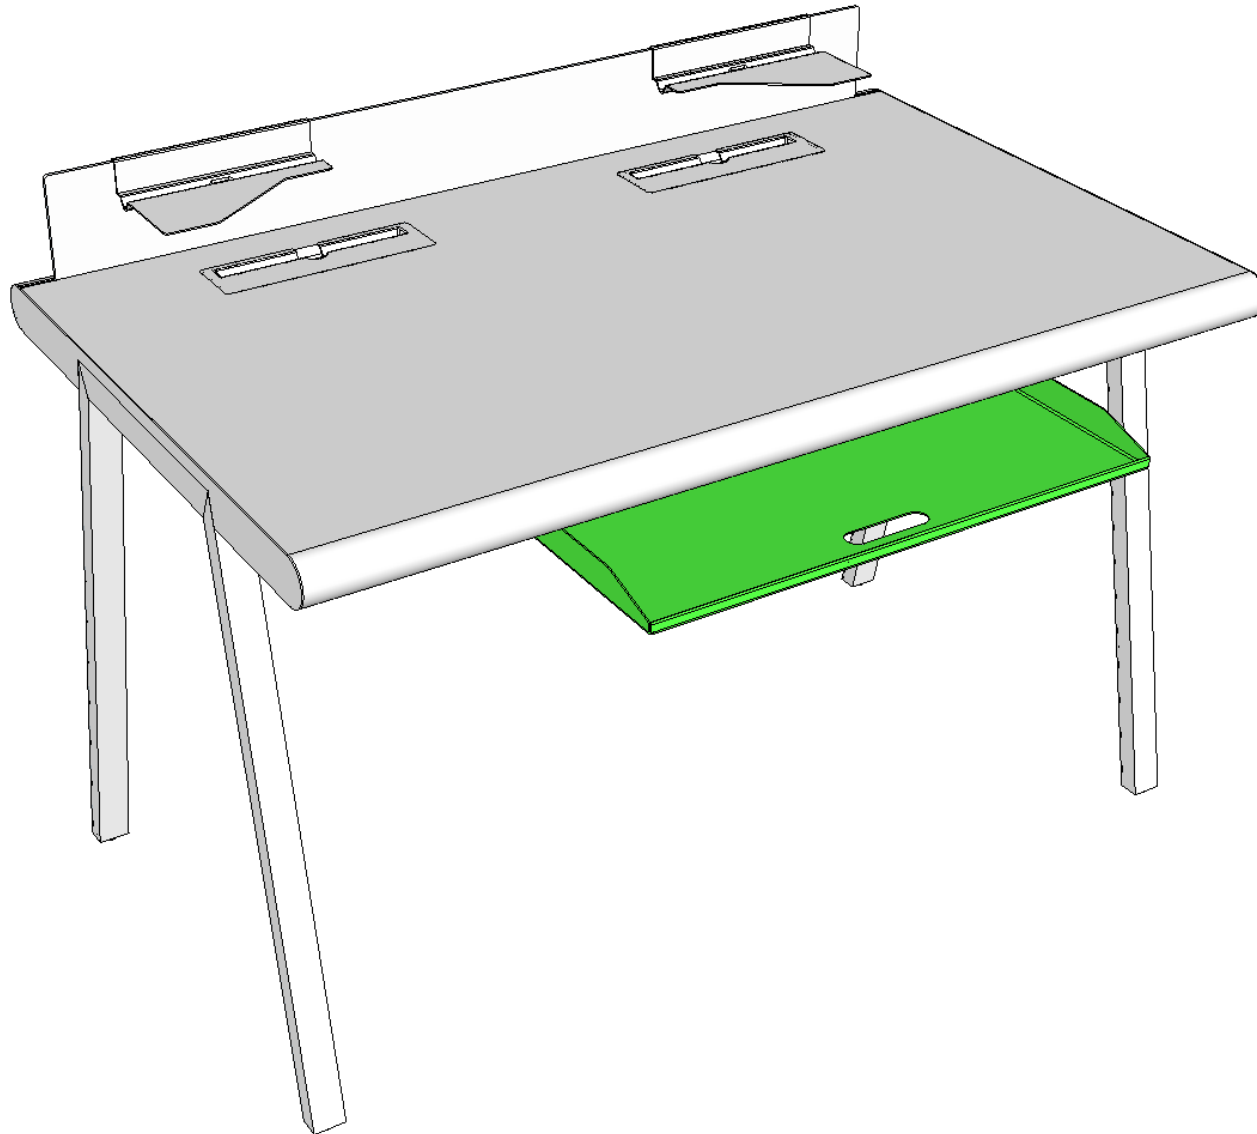

PETER PEPPER PRODUCTS

What's in the box


After removing the items from the cardboard box, the content consist of a fully assembled drawer (secure with a zip tie), one Allen wrench and 4 socket screws.

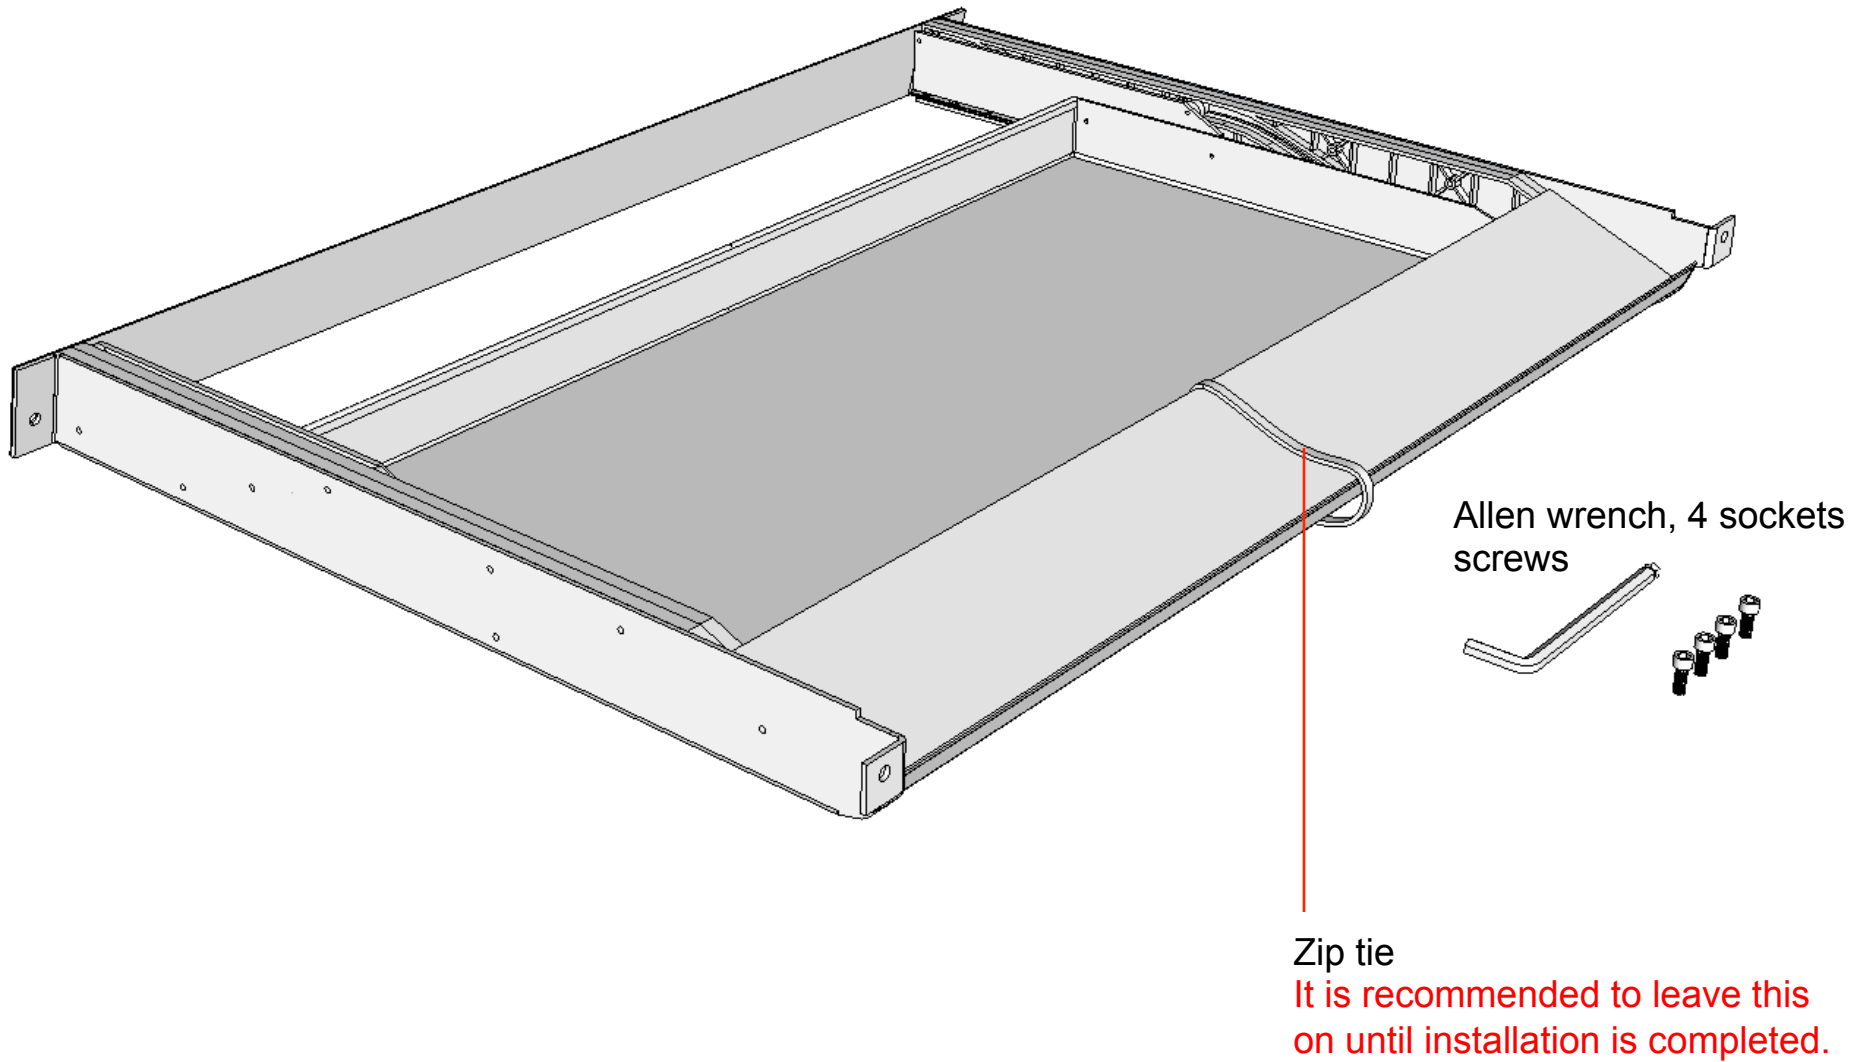

Step 1

Remove both dock shelves, both dock plates and the glass.


Important: if you installed the thumb screws to secure the glass you will have to remove those under the desk before being able to remove the glass.

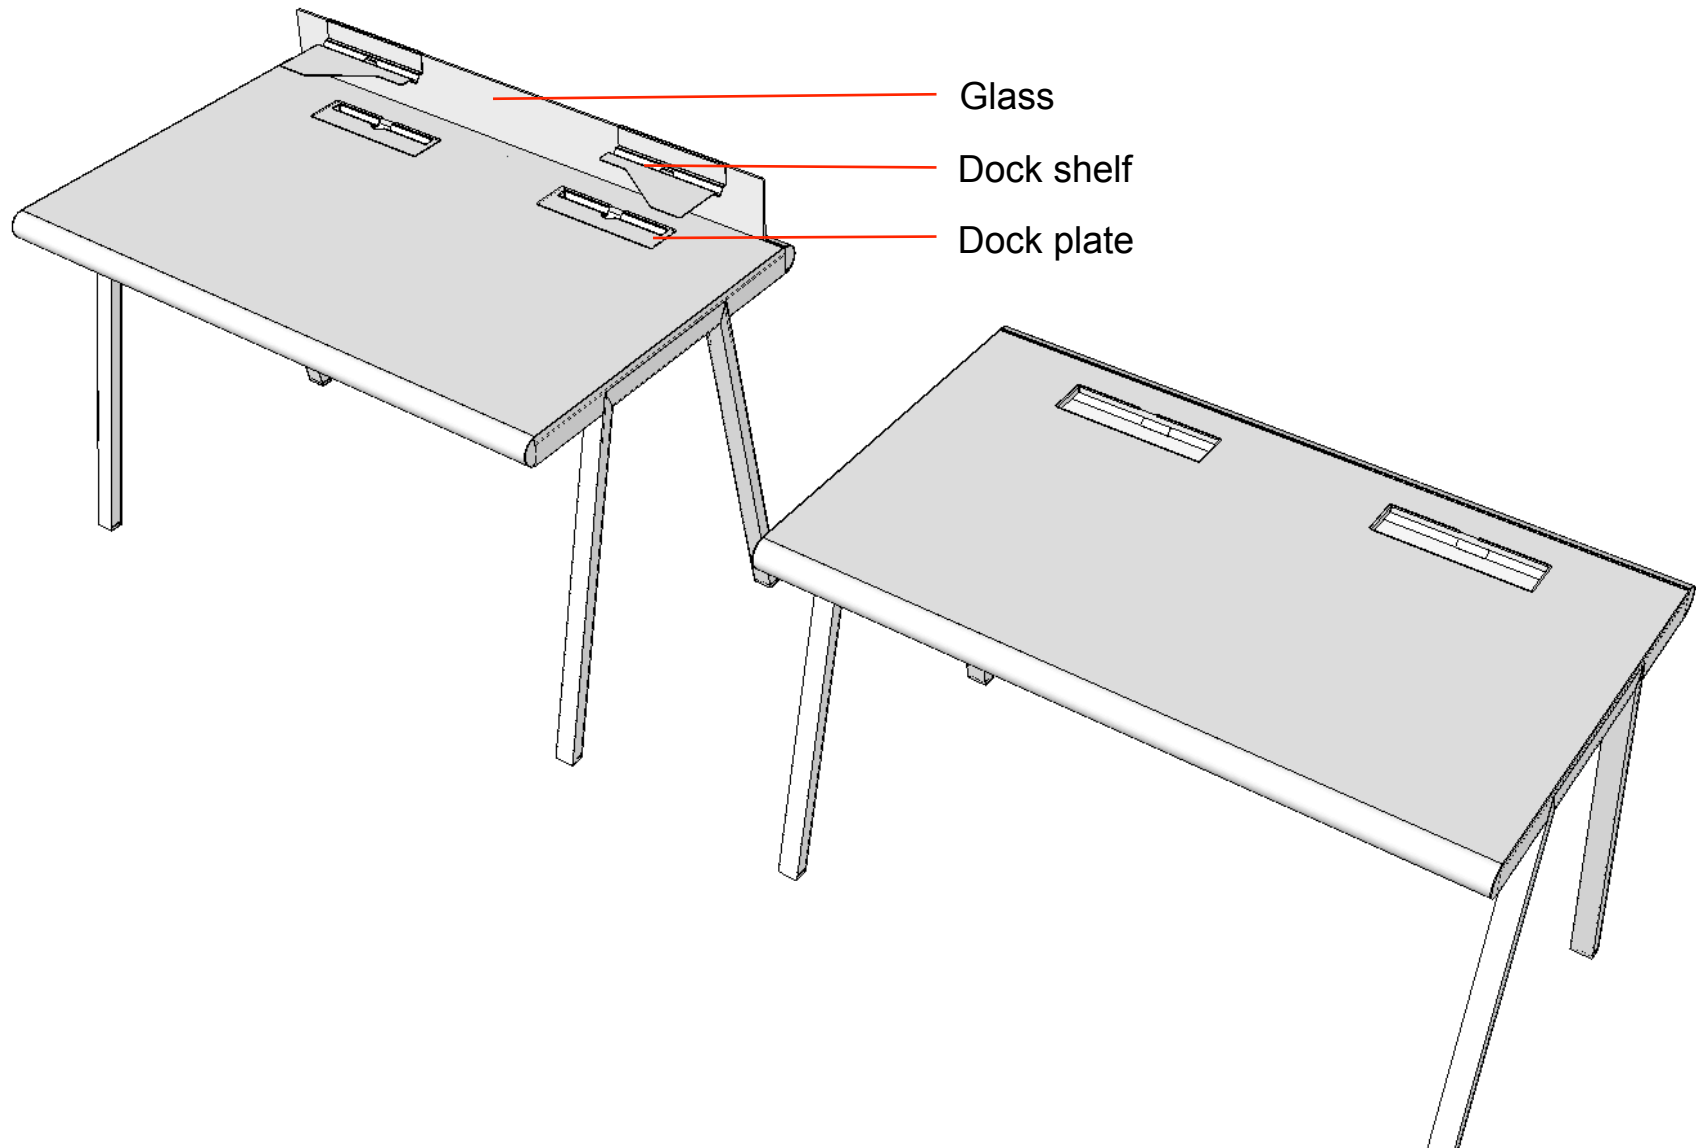

Step 2


Turn the table upside down.

Important: You should place it on a soft surface (e.g. a carpet) to avoid scratches on the table top. Place the drawer with the closed surface facing up on the inside of the desk and the zip-tied cut-out handle towards the front of the desk.

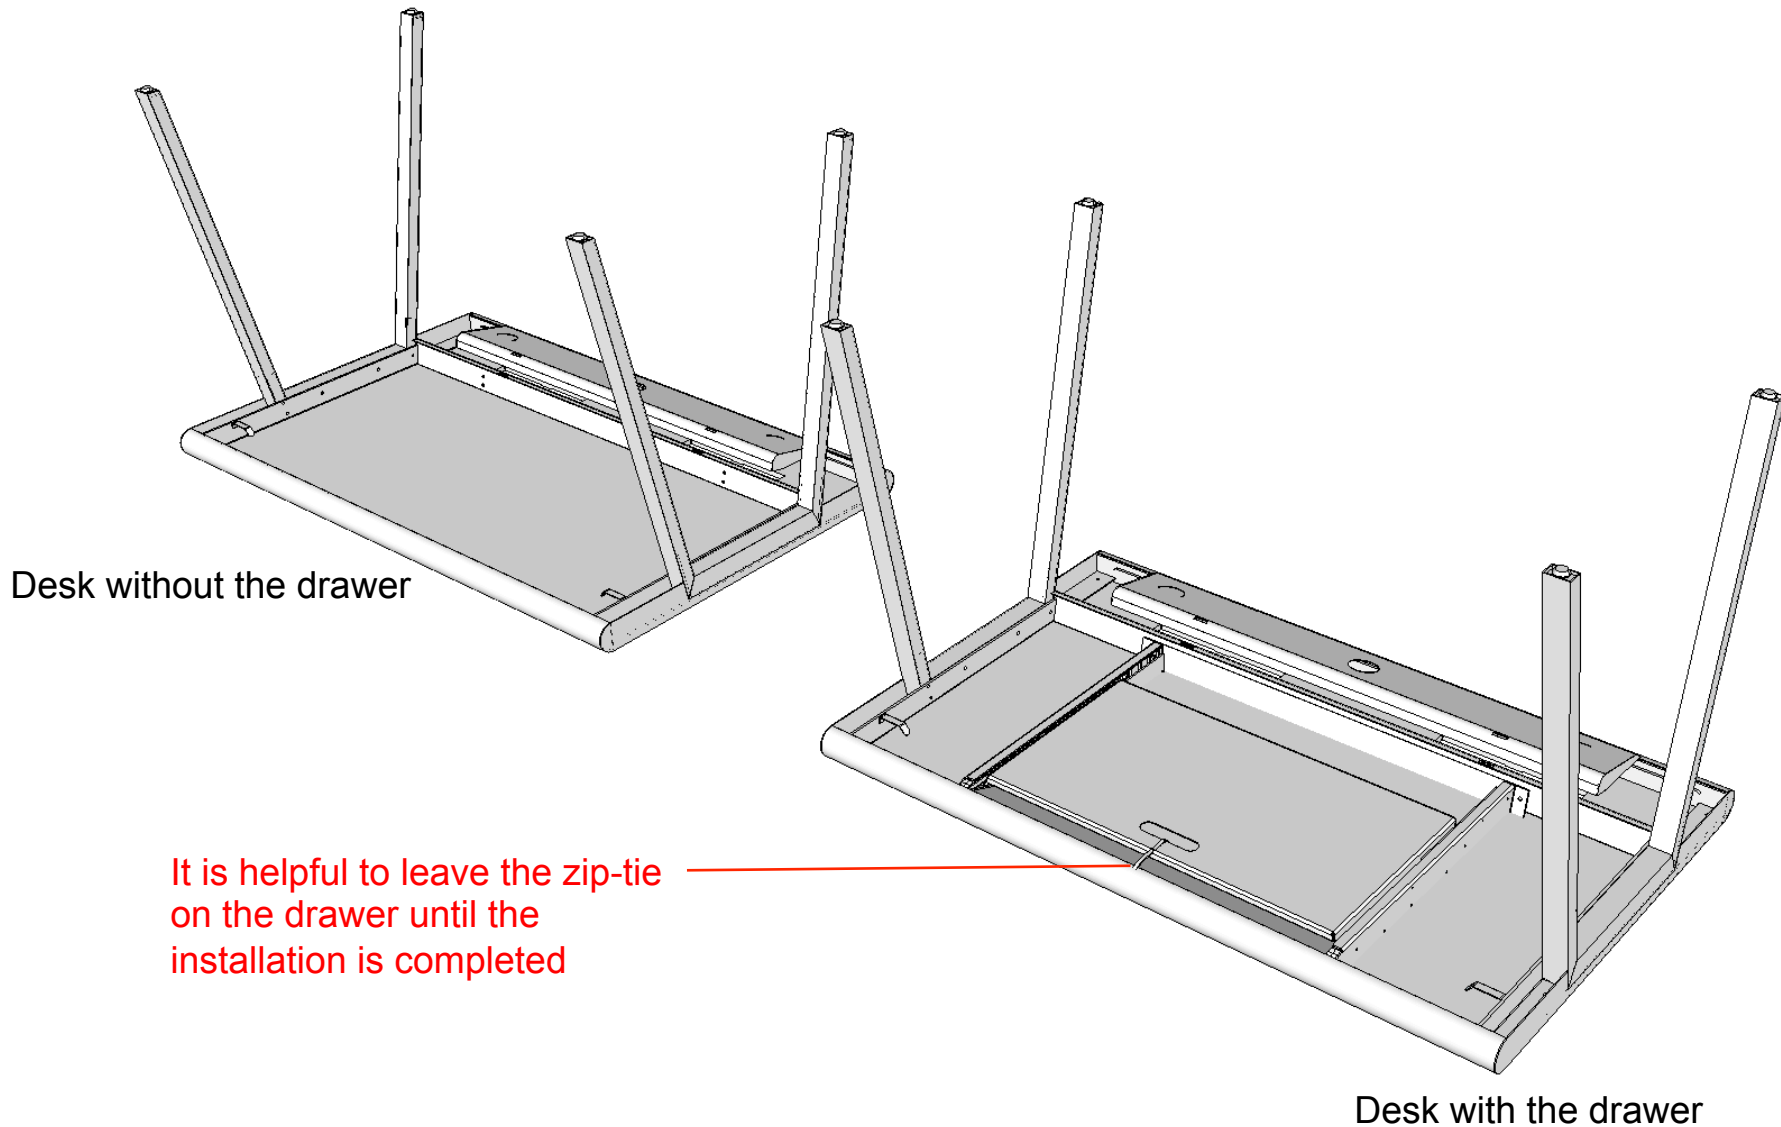

Step 3


Use the provided socket screws and Allen wrench to secure the drawer **in the back on both sides**. **Important:** The desk and the drawer have 2 holes in each side. In the back make sure to use the **upper hole (i.e. furthest from the table top)** for the attachment.

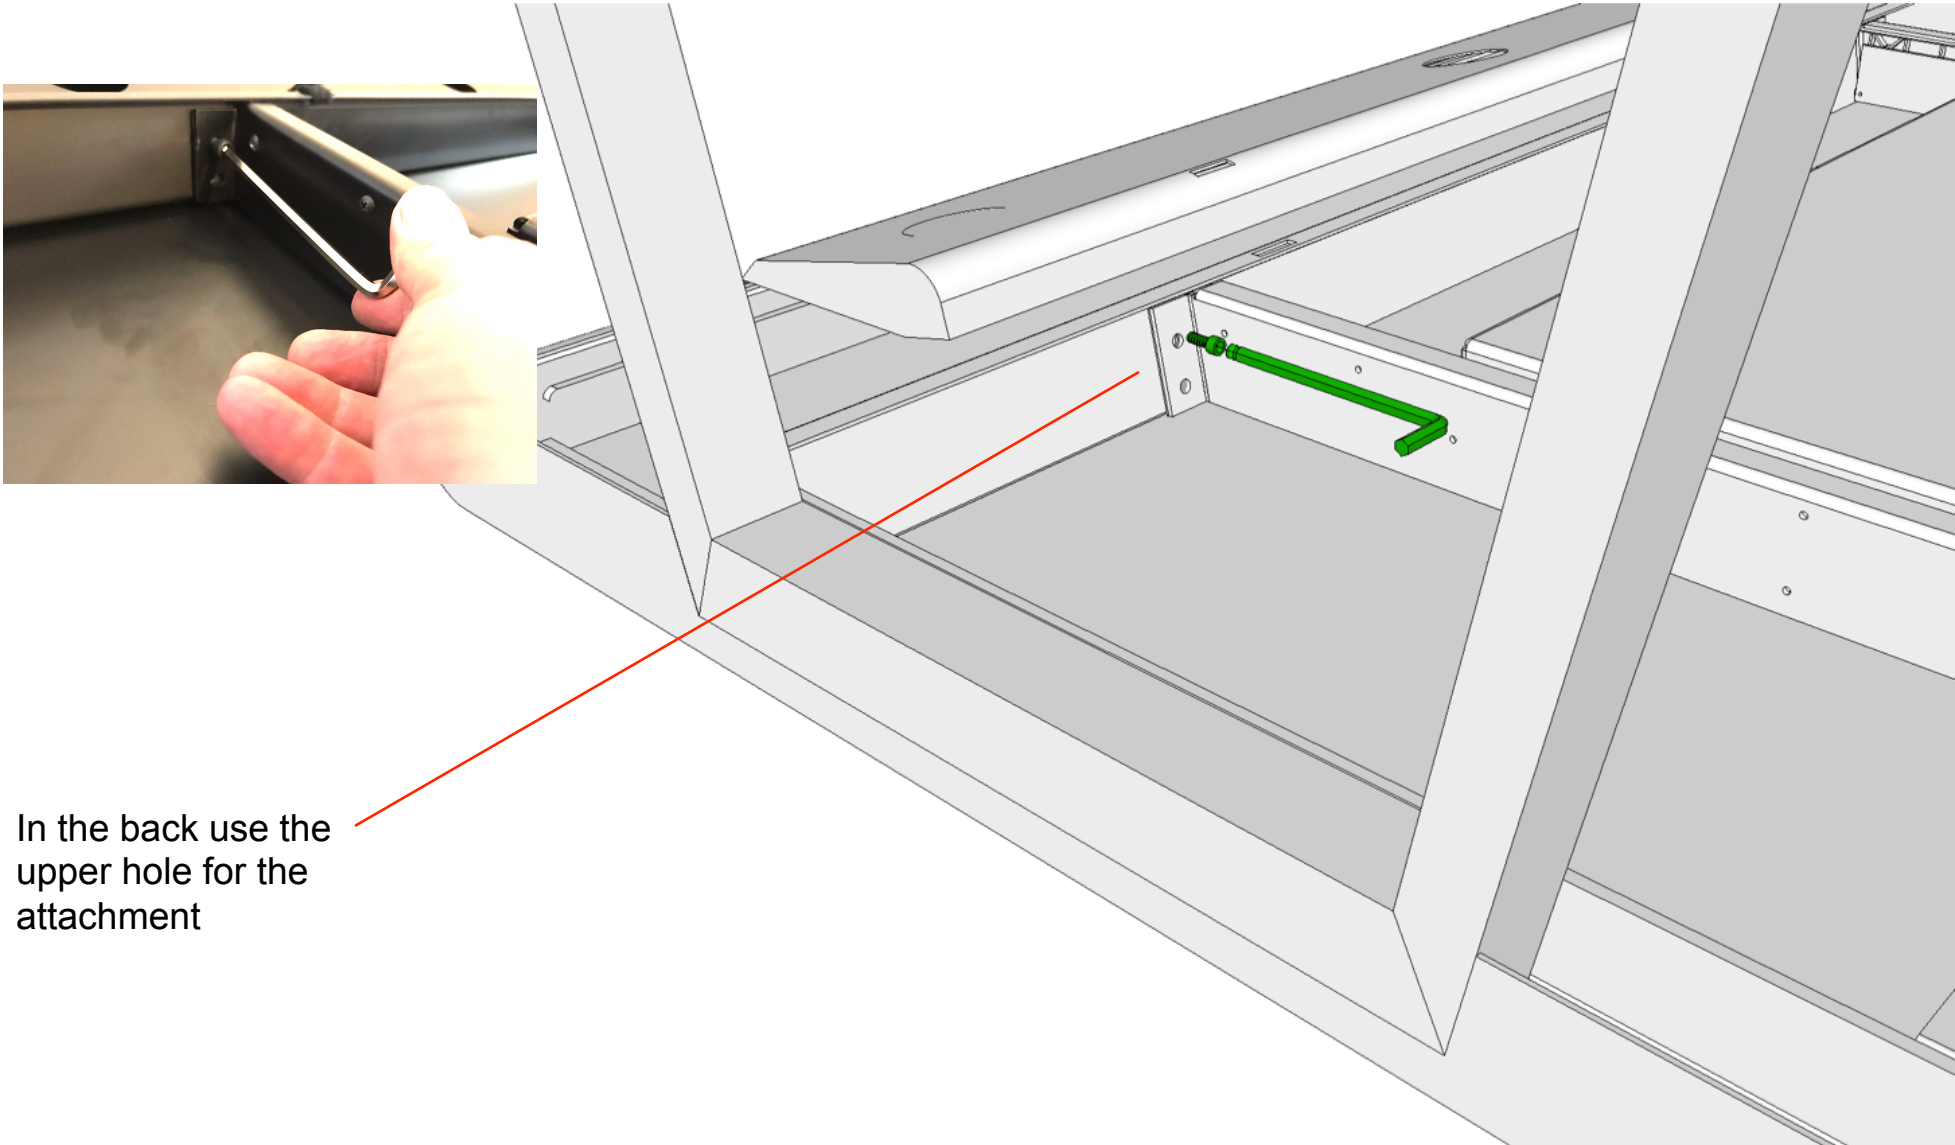

In the back use the upper hole for the attachment

Step 4

Use the provided socket screws and Allen wrench to secure the drawer **in the front on both sides**. **Important:** The desk has 2 holes, but the drawer only one. In the front make sure to use the **lower** hole for the attachment (i.e. closest to the table top).

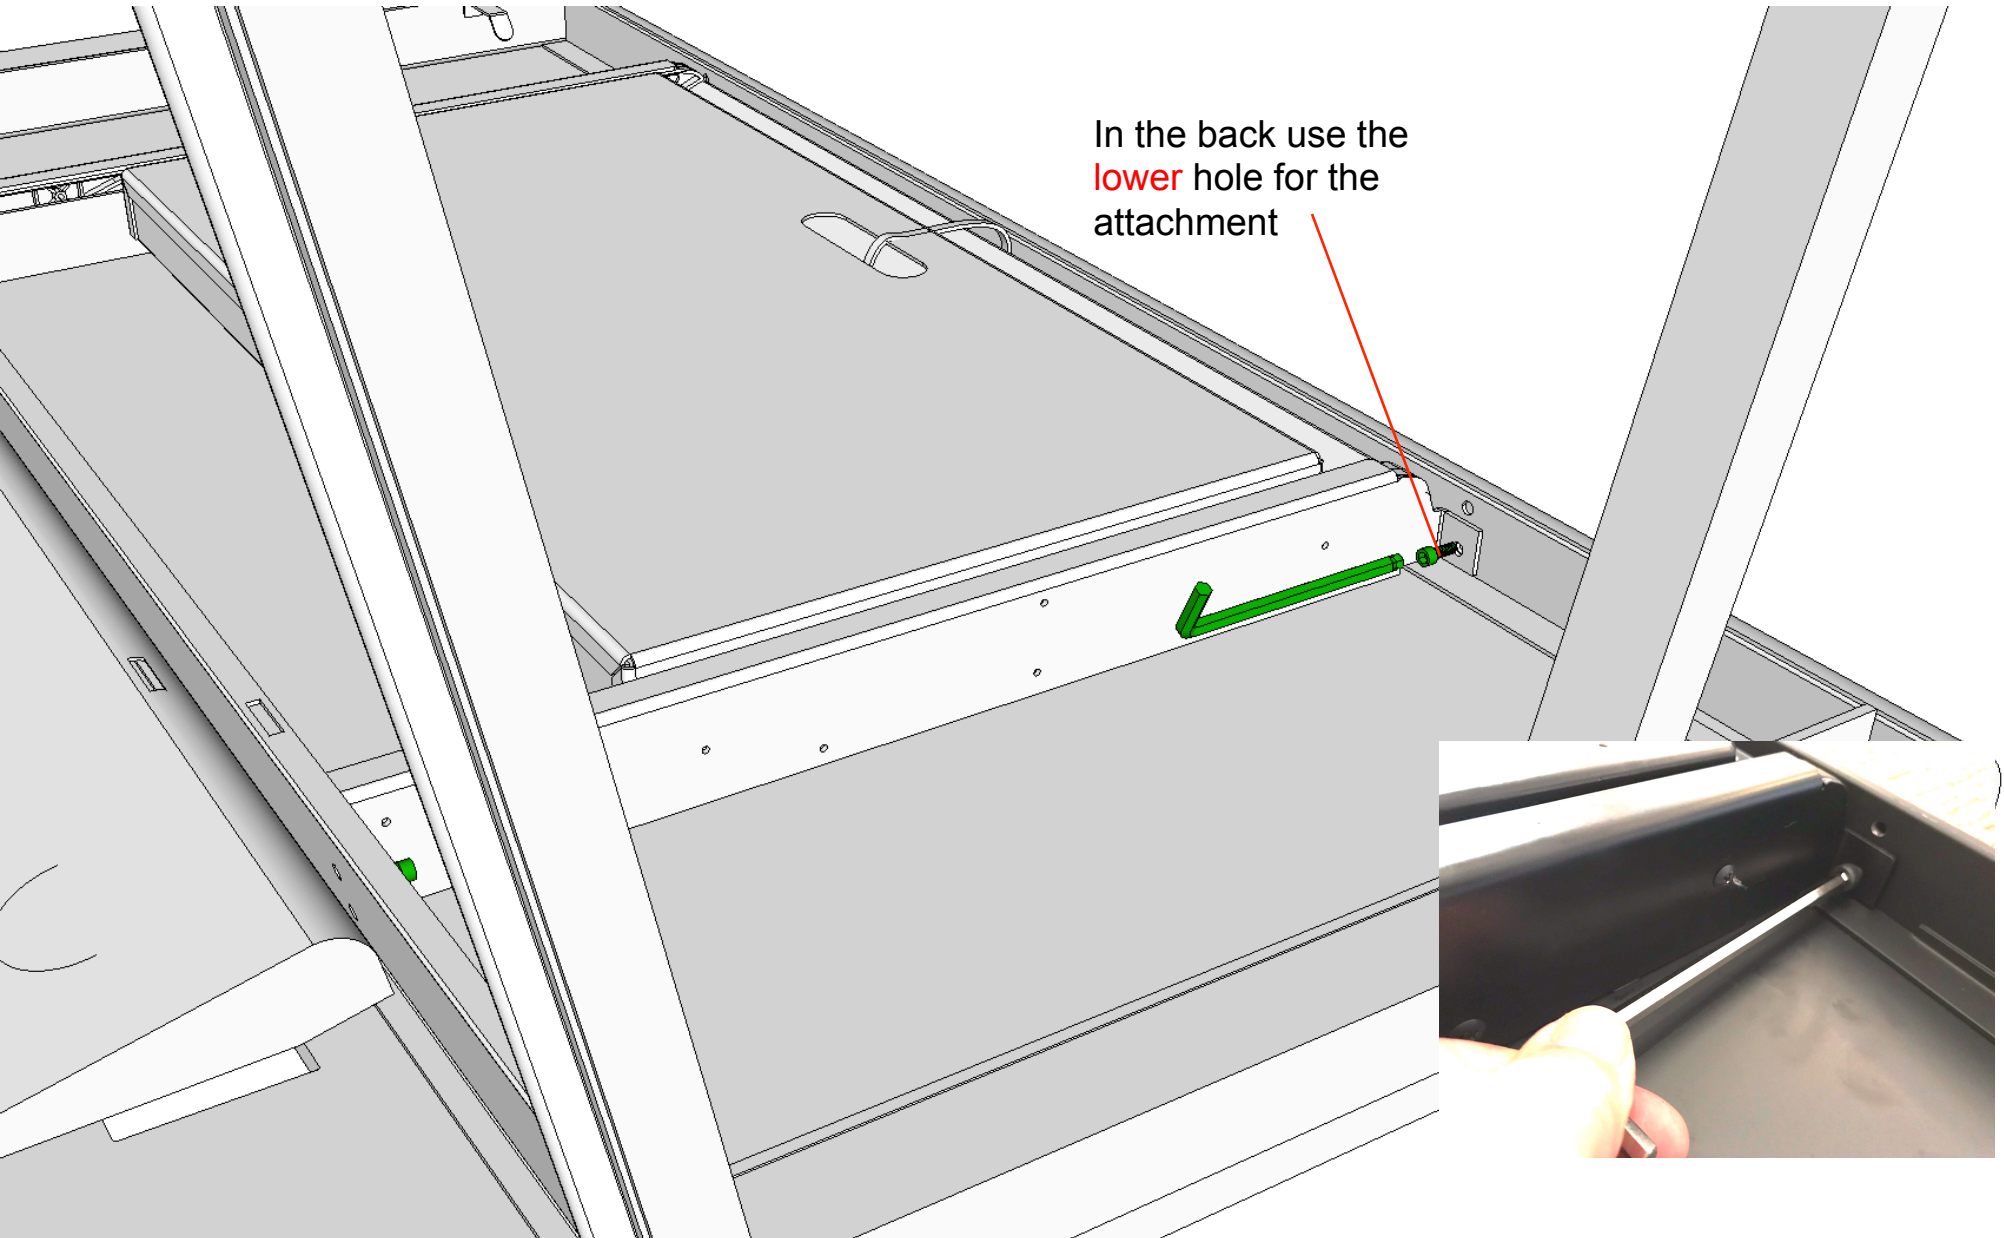

Step 5

After all 4 socket screws are secure and tightened, flip the desk to its normal upright position

Important: if you have removed the zip tie already, be careful when flipping the desk as the drawer might slide out during this operation

Step 4

Cut the zip tie with scissors, pliers or a knife, put the glass, dock plates and dock shelves back on and you are ready to go.

If you need further assistance please contact us at customerservice@peterpepper.com