

PRE DRILL HOLES for M4 Screws

TOP BEAM

WALL MOUNT DISTANCE PIECE (4)

UPRIGHTS

BOTTOM BEAM

14.0" TO TOP OF BEAM

FLOOR LEVEL

29.0"

14.0"

8.0"

B

DETAIL D SCALE 1 : 5

DETAIL B SCALE 1 : 4

SCREW PLATE

DISTANCE PIECE

Installation Instructions

SET SCREW

Product name

MODULAR SHELVING SYSTEM W/ CREDENZA

Model

MS1

TOOLS INCLUDED


- Allen wrench 2.5 mm
- Torx wrench

HARDWARE INCLUDED

- 4 pcs. – M4 screws
- 8 pcs. drywall screws plus insert
- 4 pcs. Distance Piece
- Shelf screws 4 per shelf

INSTALLATION STEPS

1. Lay credenza on it's back on the floor. Attach uprights with (4) M4 screws into pre-drilled holes.
2. Attach top and bottom beams to uprights with fasteners facing wall. Tighten with torx wrench turning clockwise ½ turn until it stops. Top beam is flush to top of upright. Bottom beam is located 14.0" from floor level, and fits tight under credenza .
3. Attach wall mount distance pieces (4) to the back of the uprights by sliding down groove . Tighten in place.
4. Set unit in desired location, level and plumb. Mark the hole locations through the screw plates.
5. Remove unit from wall. Remove screw plates and attach the screws plates to the wall with supplied hardware.
6. Set shelving unit in place, guiding the distance piece into the screw plates. Tighten set screws.
7. Install shelf brackets. Tap with mallet to insure they are fully engaged into slot. Install shelves.
8. Add additional section to the right in same manner.

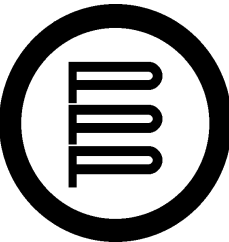

17929 S. Susana Road, Compton, CA 90224

Phone 800.496.0204 Phone 310.639.0390 Fax 310.639.6013

www.peterpepper.com e-mail: info@peterpepper.com